



## WALL CLADDING RANGE

### Ledgestone



Baw Baw Z-Tile



Grande Z-Tile



Kakadu Z-Tile



Summit Z-Tile


### Loose Dry Wall



Bluestone Ashlar Rockface



Bluestone Crazy Rockface

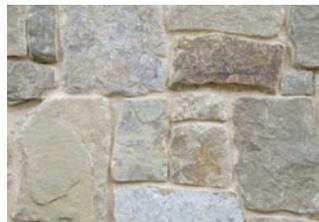

Legend



Limestone Rubble



Roman



Summit



Wamberal

### Stackstone



Baw Baw Z-Panel



Dunes Light Beige Z-Panel



Gun Metal Grey Z-Panel



Sterling Grey Z-Panel



Stackstone Various Colours



Bluestone Water Feature

eStone Direct can also source wall cladding from around the globe.  
Please talk to us to discuss your project today.



# WALL CLADDING

## GENERAL INSTALLATION TIPS

### You will require:

- Adhesive - Kerabond Plus mixed with Isolastic 50 or Keraflex Maxi
- 10-12mm notched trowel
- Gauging trowel
- Clean Sponge
- Clean Bucket
- Spacers
- Optional: Sanded Grout, Sealer, Mechanical Fixing.

1. Ensure the back of the stone is clean and free of dust and other contaminants.
2. Spread the adhesive using notched trowel, making sure there is at least a 2mm final bed thickness and full coverage of the stone surface.
3. Each stone should be fully back buttered before attempting adherence.
4. Work within controlled areas, to ensure the stone is applied promptly to the adhesive bed (refer to manufacturer's specifications).
5. To ensure that full coverage is being maintained, a sample stone piece should be removed, the adhesive coverage noted, and the stone re-laid accordingly.
6. Sponge off any residual tile adhesive immediately.
7. Once stone pieces are laid, they must not be disturbed for at least 24 hours.
8. Care should be taken to ensure that vertical progression is appropriate (i.e. Don't install too high too quickly).
9. Depending on the style of stone to be installed there are numerous techniques, which can be used to achieve a certain look. Where a grout joint or coursing is desired, use tapered wedges or pre-soaked timber spacers. Ensure these are removed once the tile adhesive has set but is not yet fully cured.
10. Please pay special attention to corner details, ensuring that the stone is never seen 'floating' on a wall. Corner pieces are made for most stone styles.

### Cutting:

Ideally it is recommended that cutting be done using a bench saw with a wet diamond blade. The stone should be washed immediately after it is cut to avoid cutting paste drying and staining the surface of the product. Appropriate safety guidelines relating to silica exposure should be adhered to on the work-site.

#### *Please Note*

*All work to be carried out in accordance with Australian Building Standards. Materials used in accordance with manufacturer's specifications. All Substrate expansion joints to be mirrored into stone work. eStone Direct take no responsibility on the installation of material supplied. Refer to our terms and conditions <https://estonedirect.com.au/pages/terms-conditions> for more information.*